

AuroraHub IoT Gateway

Quick start guide (v1.0)



Before using **AuroraHub IoT Gateway** ensure you have all needed equipment. Everything can be found in one box. Smaller antenna (1) is for IQRF connectivity, longer one (2) for WiFi/Bluetooth. Connect these antennas and power source (3) as shown in this picture:



AuroraHub IoT Gateway comes with preinstalled Linux-based operating system (*Debian Stretch*). For the connectivity via standard ethernet interface (RJ45) it uses these preconfigured settings:

IP address: DHCP
Login/pass: root/root

Please change your password (command “passwd”) right after first login!

If you want to use PIXLA remote management software follow this manual:
<https://www.pixla.online/en/help/how-to-get-token/>



RehiveTech, spol. s r.o.
Sedláčkova 2902/18
628 00 Brno
Czech Republic
www.rehivetech.com
info@rehivetech.com

