

IQ Home Sensor

SN-xxx-02 Series Datasheet



Contents



1. Product models	3
1.1. Key features	3
2. Specifications	4
2.1. Sensor Performance Graphs	5
3. Dimensions	6
4. Setup	7
4.1. Power on and off device	7
4.1.1. Power on	7
4.1.2. Power off	7
4.2. Add or remove device from the RF network	7
4.2.1. Add device to the RF network (Bonding)	7
4.2.2. Remove device from the RF network with user button (Unbonding)	7
4.2.3. Meaning of status LEDs	8
5. Battery replacement	9
5.1. Caution!	9
5.2. To replace the battery	9
6. For your safety	10
6.1. WARNINGS	10
6.2. Notices	11
7. Contact Us	11

1. Product models

Model ID	Product name	T [°C]	rH [%]	CO ₂ [ppm]
SN-TH-02	Temperature and Relative Humidity Sensor	✓	✓	
SN-THC-02	CO ₂ + Temperature and Relative Humidity Sensor	✓	✓	✓

1.1. Key features

- Simple and elegant design
- Ready to use ambien sensors
- Battery powered wireless solution
- No wiring needed during installation
- Various configurations
 - Temperature
 - Relative Humidity
 - CO₂
- High accuracy
- Long operation lifetime
- User friendly

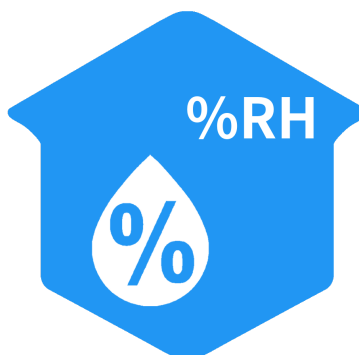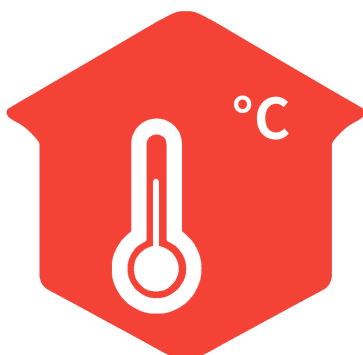

2. Specifications


Temperature sensing	SN-TH-02	SN-THC-02
Measurement range	-20 °C to +60 °C	0 °C to +50 °C
Accuracy	±0.3 °C (typical)	
Resolution	0.0625 °C	
Relative humidity sensing		
Measurement range	0 % to 85 %	
Accuracy	±3 RH (typical)	
Resolution	0.0625 %	
CO2 concentration sensing	SN-TH-02	SN-THC-02
Measurement range	x	0 ppm to 5000 ppm
Accuracy	x	±50 ppm +/- 3% of reading
Resolution	x	1 ppm
RF Specification		
Communication technology	IQRF - DPA	
Communication module	DCTR-76DA	
IQRF-OS version	4.02D	
IQRF-DPA version	3.02	
Default IQRF channel	52 (868.35 MHz)	
RF mode	Low Power	
RF band	868 MHz (916 MHz on special request)	
RF output power	10 mW	
Antenna	Internal, PCB	
Local state feedback		
State feedback	LED (Red/Green)	
Environmental conditions	SN-TH-02	SN-THC-02
Storage temperature	from -20°C to +60°C	

Operation temperature	from -20°C to +60°C	from 0°C to +50°C
Relative humidity	from 0 % to 85 %	
Electrical specification	SN-TH-02	SN-THC-02
Input power supply / Input voltage	2400 mAh 3.6V Li-Ion Battery (AA size) [Battery included]	
Sleep consumption	<1 uA (typical)	
Idle consumption (RF RX active)	345 uA (typical)	1 mA (typical)
RF TX consumption	Maximum 22 mA (according to RF output power)	
Sensor ready time	< 2s	< 10s
Mechanical and enclosure specification		
Product dimension (outline)	80mm(W) x 80mm(D) x 25mm(H)	
Mount type	Wall mountable	
Enclosure material	ABS	
Body colour	White	
Product weight	80 g	
Enclosure protection level	IP20 (for indoor use only)	


Be careful with the head size of the screw!

2.1. Sensor Performance Graphs


Temperature Sensor

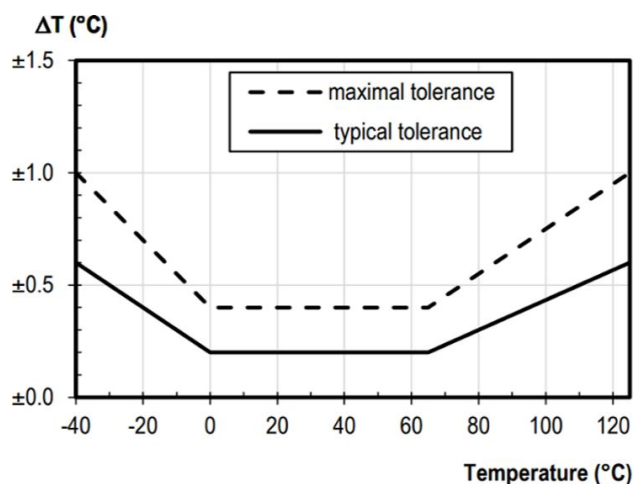


Humidity Sensor

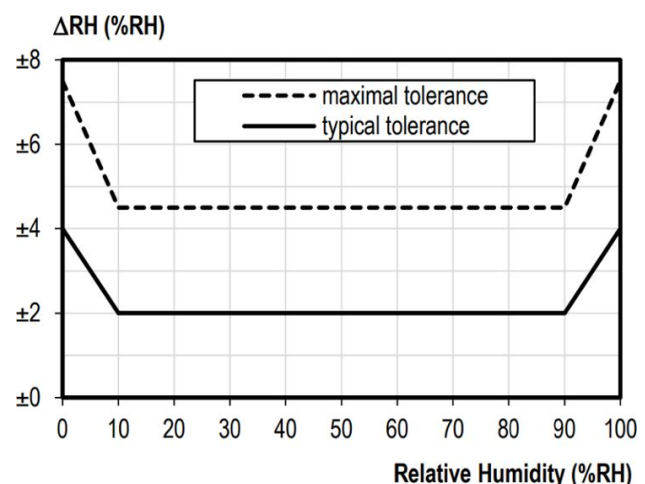

3. Dimensions

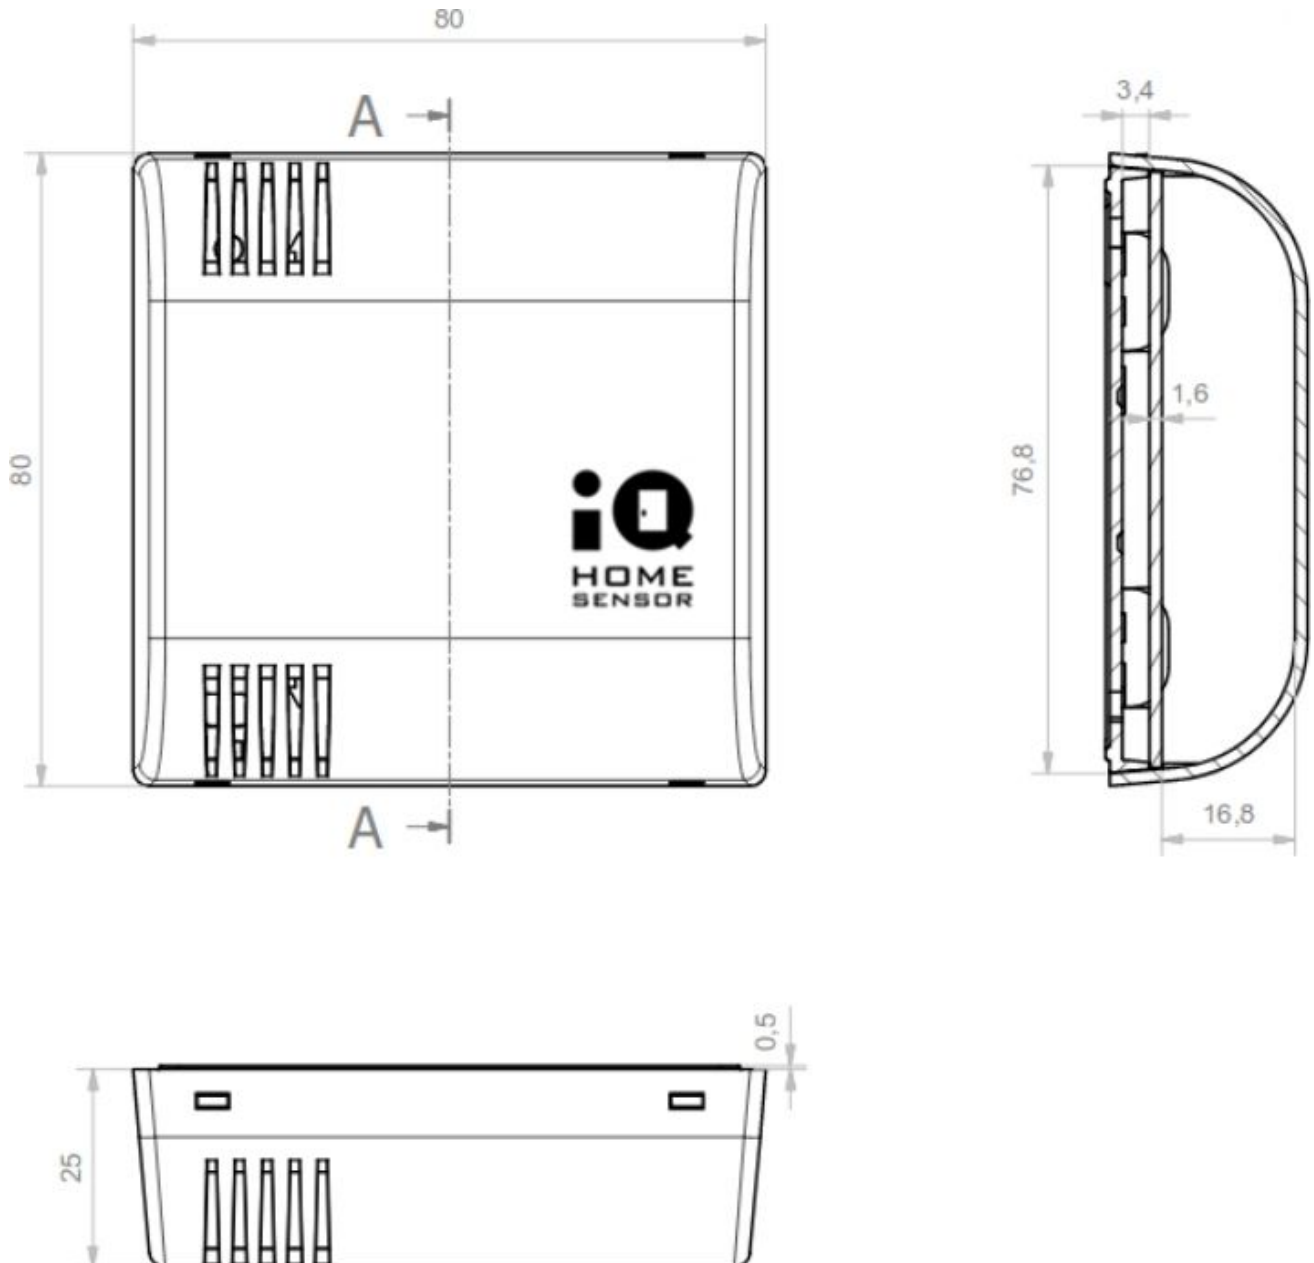

4. Setup

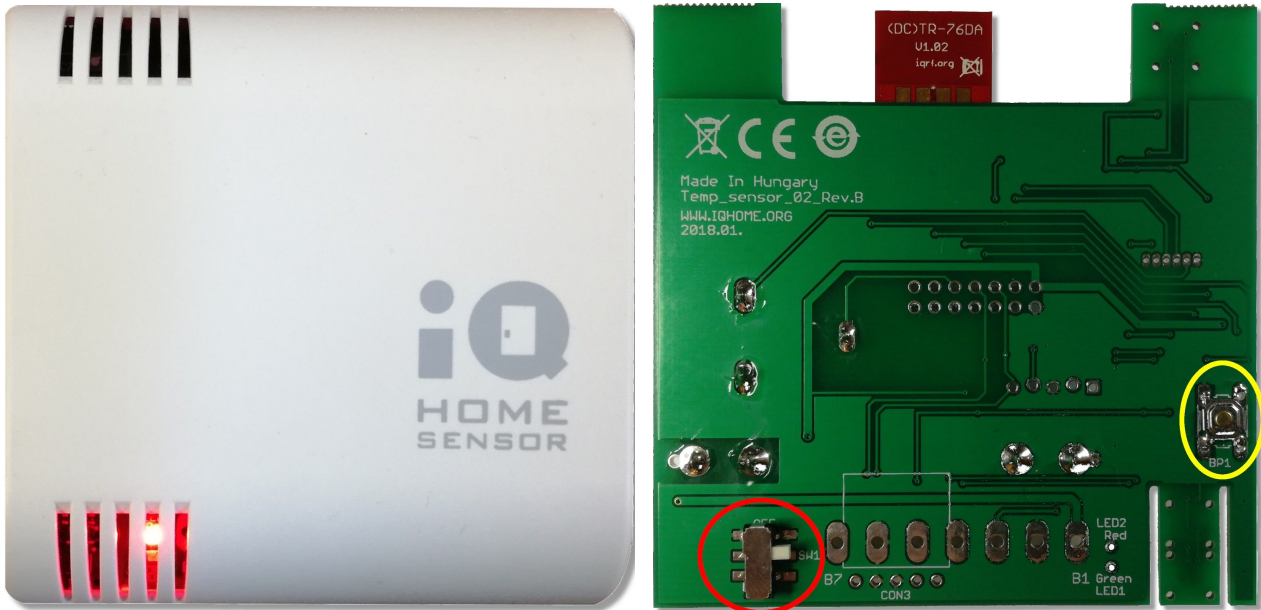

4.1. Power on and off device

The device can be powered on/off with switch marked on picture with red circle.

4.1.1. Power on

Switch the power button to on state. After this the red LED is flashing.

4.1.2. Power off

Switch the power button to off state.

4.2. Add or remove device from the RF network

The device can be add/remove from network with push button marked on picture with yellow circle.

4.2.1. Add device to the RF network (Bonding)

To use DPA, all Nodes in the network must be bonded to the Coordinator.

In case the Node is already bonded the red LED once shortly flashes after power on.

If the node is not bonded the red LED is flashing for 10 s and then the module falls into sleep.

To bond node during bond period press the user pushbutton and the node going to bond.

4.2.2. Remove device from the RF network with user button (Unbonding)

Press and hold user button and turn on device.

Green LED shines for about 2 s.

Release the user button immediately once the green LED stops shining.

If the node is successfully unbonded, red LED is flashing and module falls asleep after 10 s.

4.2.3. Meaning of status LEDs

- After power on the red LED is flashing:
 - Device is not bonded.
- Green LED is periodically flashing. Elapsed time between two flashes is 5 sec:
 - Device is bonded and is on-line.
- Green and red LED is pulse one or more times:
 - Active RF communication is in progress.
- After successful bonding the Red LED is still flashing:
 - Sensor error - Please contact with the distributor.
- No LED activities and the module is powered on:
 - Module is in sleep mode or the battery is empty.

5. Battery replacement

If no light appears after switching on, you should replace the unit's battery.

5.1. Caution!


Do NOT use standard 1.5V AA size alkaline battery!

Always use the same type lithium battery what used previously!

Recommended battery type: ER14505 (AA size, 3.6V)

5.2. To replace the battery

1. Remove the back plate.
2. Switch off the power button.
3. Lift the circuit board from the box.
4. Remove the old battery.
5. Insert the new, same type battery.
6. Put back the circuit board.
7. Switch on the power button.
8. Add device to the RF network.
9. Reseat the back plate.

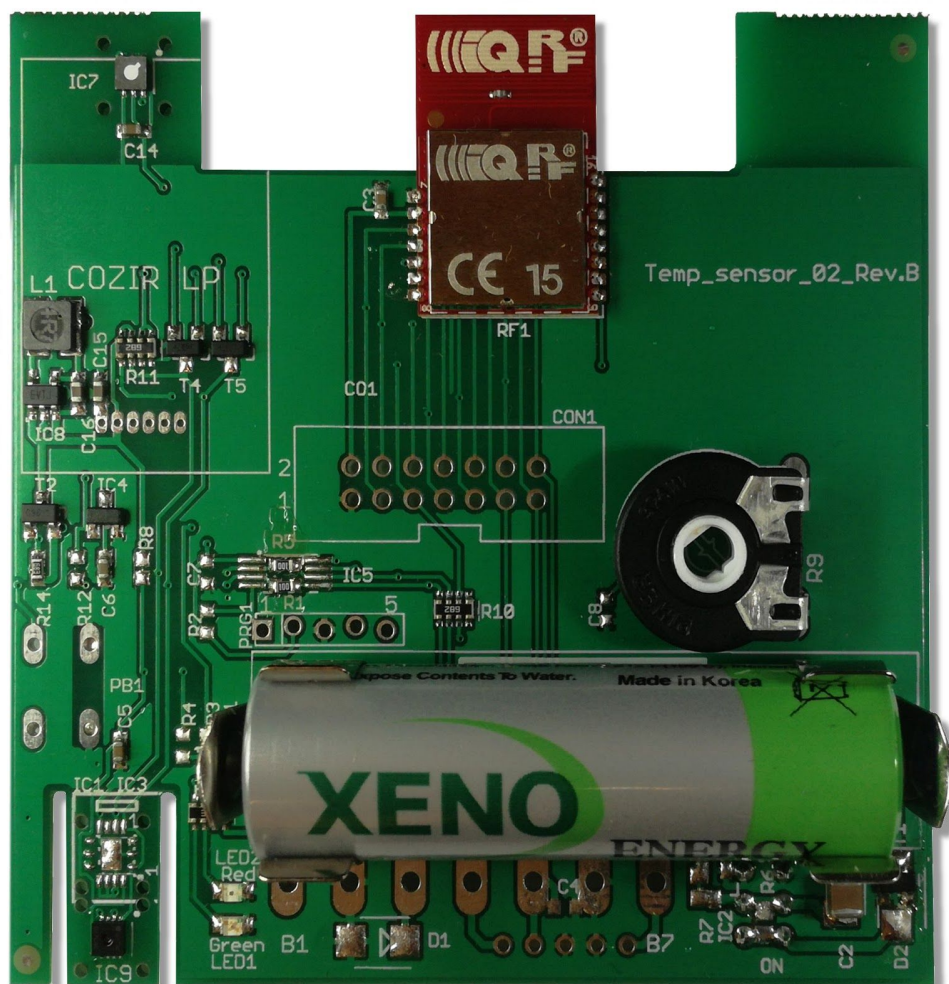

6. For your safety

To prevent damage to your product or injury to yourself or to others, read the following safety precautions before using this equipment. Keep these safety instructions where all those who use the product will read them.

6.1. WARNINGS

- **Turn off immediately in the event of malfunction**

Should you notice smoke or an unusual smell coming from the equipment, power off the equipment and remove the battery immediately, taking care to avoid burns. Continued operation could result in injury.

- **Do not use in the presence of flammable gas**

Do not use electronic equipment in the presence of flammable gas, as this could result in explosion or fire.

- **Keep out of reach of children**

Failure to observe this precaution could result in injury.

- **Observe proper precautions when handling batteries**

Batteries may leak or explode if improperly handled. Observe the following precautions when handling batteries for use in this product:

- Use only batteries approved for use in this equipment.
- Do not short or disassemble the battery.
- Be sure the product is off before replacing the battery.
- Do not attempt to insert the battery upside down or backwards.
- Do not expose the battery to flame or to excessive heat.
- Do not immerse in or expose to water.
- Do not transport or store the battery with metal objects such as necklaces or hairpins.
- Batteries are prone to leakage when fully discharged. To avoid damage to the product, be sure to remove the battery when no charge remains.
- When the battery is not in use, store in a cool, dry place.
- The battery may be hot immediately after use or when the product has been used on battery power for an extended period. Before removing the battery turn the device off and allow the battery to cool.
- Discontinue use immediately should you notice any changes in the battery, such as discoloration or deformation. Failure to observe this precaution could result in injury.

6.2. Notices

- This manual included with the product may not be reproduced, translated to any language or used to any other purpose without IQ Home's written permission.
- IQ Home reserves the right to change specifications described in this manual at any time without prior notice.
- IQ Home will not be held liable for any damages resulted from the use of this product.
- We made as much effort as we could while prepared this manual to make it useful, accurate and complete. If we made mistakes, we appreciate if you contact us and let us know.

This symbol indicates that this product is to be collected separately.



- This product is designated for separate collection at an appropriate collection point. Do not dispose of as household waste.
- For more information, contact the retailer or the local authorities in charge of waste management.

This symbol on the battery indicates that the battery is to be collected separately.



- All batteries whether marked with this symbol or not, are designated for separate collection at an appropriate collection point.
- Do not dispose of as household waste. For more information, contact the retailer or the local authorities in charge of waste management.

7. Contact Us

IQ HOME Kft.

Address: 1139 Budapest, Forgách utca 32. 5. ép. 3. em. 312., Hungary

Email: info@iqhome.org

Website: www.iqhome.org